

SUPER Type T

Comfortable, flexible, durable chemical barrier, Type 1 / Level B protection

Previously known as: TRELLCHEM® SUPER Type T

Comfortable and durable full chemical protection suit ideal for explosive atmospheres.

- **Specialized protection:** The AlphaTec® SUPER Type T full-chemical protection suit is designed with antistatic butyl rubber and Viton™ top coating to ensure superior resistance against wide range of chemicals, such as alkalis, strong acids, petrochemicals, chlorinated solvents, aromatics and oils
- **Advanced ergonomics:** This protective suit features a non-encapsulating design with a face seal and without hump (type T) breathing apparatus that is worn outside the suit, thus making ideal for enclosed working conditions
- **Elevated comfort:** Delivering strength and durability while maintaining softness and flexibility, this chemical protective suit is made with Butyl rubber and Viton™ rubber coated on polyamide fabric to increase comfort



Industries

- Food Processing
- Life Sciences
- Chemical
- Industrial
- Fire and Rescue
- Law Enforcement
- Emergency Medical Services
- Shipping

Applications

- Maintenance of plant and machines
- Plant Emergencies
- Accidental release of toxic gases
- Biohazard response
- Unexpected leakages spills or other releases
- Tank Cleaning
- CBRN Emergencies
- Chemical leaks
- Emergency Response
- Hazmat response
- Shipping


KEY FEATURES & BENEFITS

- **Anti-static butyl rubber with a Viton™:** Superb chemical resistance
- **Non-encapsulating design:** Ideal for work in enclosed spaces
- **Blend of materials:** Optimal comfort, durability and flexibility


Material Diagram



Seam Diagram

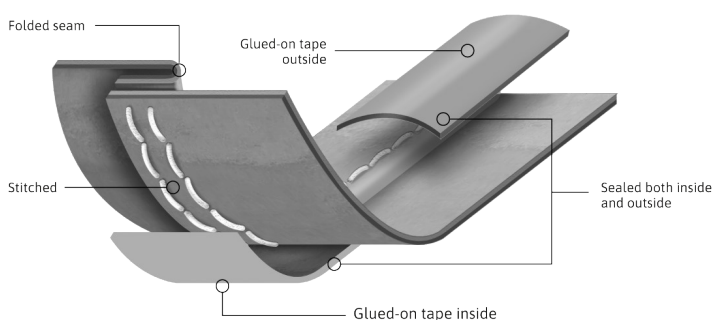

Performance Standards



Product Information

Product Information	
Available Sizes	2XS, XS, S, M, L, XL, 2XL, 3XL
Color	Yellow
Country Of Origin	Lithuania
Packaging Overview	Individually Packed
Product Material	Outer: Butyl rubber and a top layer of Viton rubber coated on polyamide fabric Inner: Butyl rubber
Product Reference	SUPER Type T
Standards Overview	<ul style="list-style-type: none"> • EN 943-1:2015 + A1:2019 • EN 943-2:2019 • EN 1073-2:2002 (radioactive particle protection) • EN 14126:2003 (infective agent protection) • EN 1149-5:2008 (antistatic suit material) • Approved for use in ATEX zones 0, 1, 2/20, 21, 22 and chemical group IIA, IIB, IIC • SOLAS
Seam Type	Stitched and sealed with a glued-on tape on both inside and outside
Shelf Life	10 años

Suit components & accessories

Suit Components and Accessories	
Design Features	Non-encapsulating design with face seal and without hump (type T), breathing apparatus worn outside the suit.
Visor And Face Seal	Anatomically designed rubber face seal.
Gloves And Attachments	AlphaTec® 38-628 Viton/Butyl rubber gloves in combination with rubber cuffs for added safety. Other glove options are available. The gloves are attached with the AlphaTec® Bayonet glove ring system, which offers quick and simple glove exchange.
Footwear And Attachments	Sewn-in sock/booties made of the suit material. Alternatively attached black nitrile rubber safety boots with European approval as Firemen's boots. The boots are fixed with an ergonomically designed ring attachment, for simplified boot exchange.
Zipper	AlphaTec® HCR zipper, which includes a barrier film for increased chemical resistance. The zipper is closing downwards, for added safety, and is protected by a flap/splash guard.
Ventilation	<ul style="list-style-type: none">• A ventilation system is included as standard. For the safety of the wearer, it provides a constant level of overpressure inside the suit• The AlphaTec® Regulating valve has 3 ventilation rates (2, 30 and 100 l/min) plus zero/off position• CEJN 221 male coupling for connection to the SCBA (requires separate connection hose)• One AlphaTec® Exhaust valve on the chest.
Optional Features And Accessories	<ul style="list-style-type: none">• Waist belt, internal,• D-ring for holding small measuring instruments & tools,• Customized marking, e.g. digits, letters, logos,• AlphaTec® 58-800 Overglove for improved cut & puncture resistance,• AlphaTec® SCBA Cover,• Other accessories are available upon request
Included With Each Delivery	<ul style="list-style-type: none">• 1 pce AlphaTec® Mini Hood for protection against inward leakage between mask and face seal, in case of jet spray from behind• 1 pair of comfort inner gloves• 2 pcs extra locking pins for the Bayonet glove ring system• 1 pce Molycote lubrication for the O-rings in the Bayonet glove ring system• 1 pce grease stick for lubrication of the zipper• 1 pair of comfort silicone oversocks (only for suits with sewn-in socks)• 1 pce coat hanger• 1 pce AlphaTec® Storage bag

For additional information visit us at www.ansell.com, or call us at

Europe, Middle East & Africa Region
Ansell Healthcare Europe NV
T: +32 (0) 2 528 74 00

Asia Pacific Region
Ansell Global Trading Center
T: +603 8310 6688

North America Region
Ansell Healthcare Products LLC
T: +1 800 800 0444

Latin America & Caribbean Region
Ansell Commercial Mexico S.A. de C.V.
T: +52 442 248 1544 / 248 3133

Australia
Ansell Limited
T: +61 1800 337 041

Ansell, ® and ™ are trademarks owned by Ansell Limited or one of its affiliates. US Patented and US and non-US Patents Pending: www.ansell.com/patentmarking © 2024 Ansell Limited. All Rights Reserved.

Neither this document nor any other statement made herein by or on behalf of Ansell should be construed as a warranty of merchantability or that any Ansell product is fit for a particular purpose. Ansell assumes no responsibility for the suitability or adequacy of an end user's selection of gloves for a specific application.

